


## JLP-75A through JLP-600A – Parts Breakdown

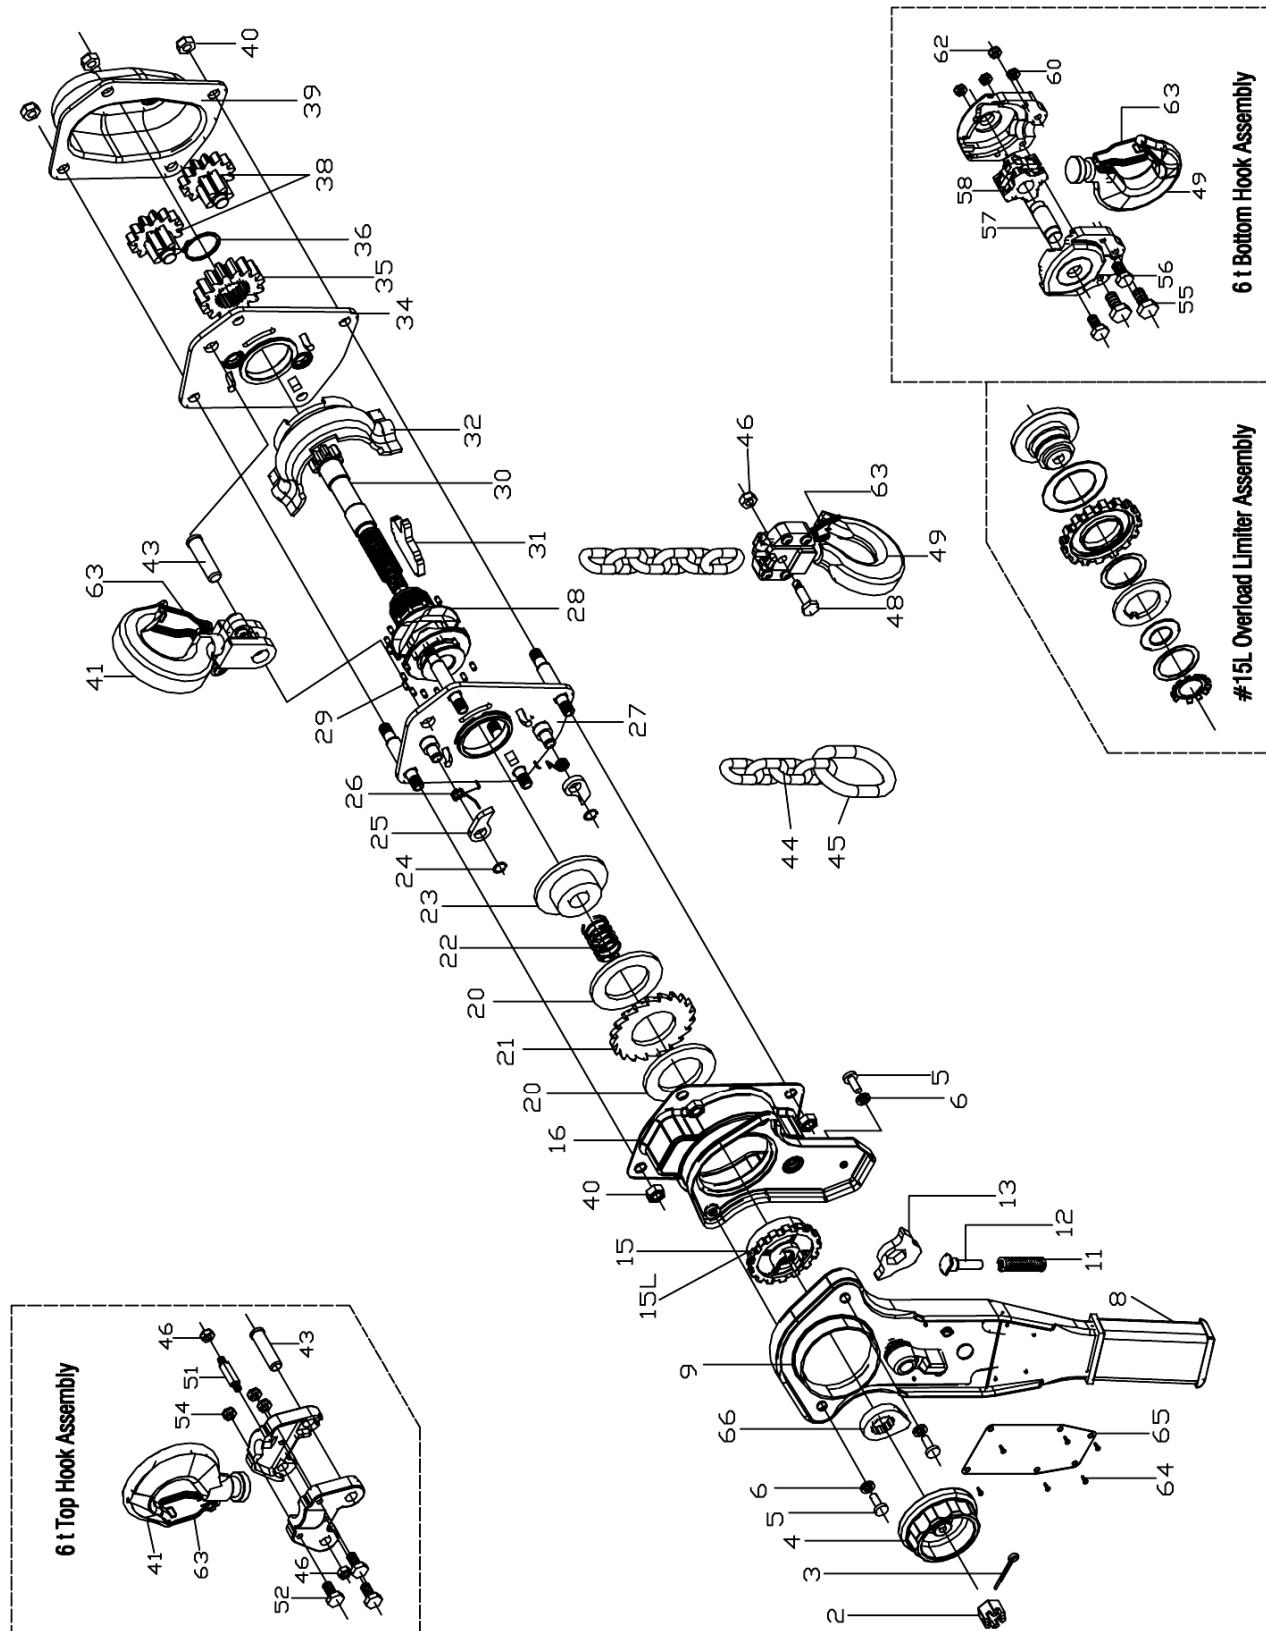

## JLP-600A – Parts List

<b>Index No.</b>	<b>Part No.</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
2.....	JLP150A-02 .....	Castle Nut (1.5T, 3T, 6T).....	M10 .....	1
3.....	JLP150A-03 .....	Split Pin (1.5T, 3T, 6T).....	2.5x25 mm .....	1
4.....	JLP150A-04 .....	Handwheel (1.5T, 3T, 6T).....	.....	1
5.....	JLP150A-05 .....	Hex Head Screw (1.5T, 3T, 6T) .....	M8 .....	3
6.....	JLP150A-06 .....	Spring Washer (1.5T, 3T, 6T) .....	Ø8 mm .....	3
8.....	JLP150A-08 .....	Rubber Grip (1.5T, 3T, 6T) .....	.....	1
9.....	JLP150A-09 .....	Lever Handle Assembly (1.5T, 3T, 6T) .....	.....	1
	.....	..... Selector Lever .....	.....	1
	.....	..... Rubber Grip.....	.....	1
	.....	..... Change Over Spring Seat.....	.....	1
	.....	..... Reinforced Screw Nut.....	.....	1
	.....	..... Rivet.....	.....	2
11.....	JLP150A-11 .....	Change Over Spring (1.5T, 3T, 6T).....	.....	1
12.....	JLP150A-12 .....	Spring Shaft (1.5T, 3T, 6T) .....	.....	1
13.....	JLP150A-13 .....	Change Over Pawl (1.5T, 3T, 6T) .....	.....	1
15.....	JLP150A-15 .....	Change Over Gear (1.5T, 3T, 6T) .....	.....	1
*15L .....	JLP600A-15L .....	Overload Limiter Assembly .....	.....	1
	.....	..... Overload Limiter Plate .....	.....	1
	.....	..... Friction Disc A .....	.....	1
	.....	..... Change Over Gear .....	.....	1
	.....	..... Friction Disc B .....	.....	1
	.....	..... Pressure Plate.....	.....	1
	.....	..... Dish Spring.....	.....	1
	.....	..... Disc.....	.....	1
	.....	..... Disc Spring Stopper.....	.....	1
	.....	..... Adjusting Nut.....	M30 .....	1
16.....	JLP300A-16 .....	Brake Cover Assembly .....	.....	1
	.....	..... Brake Cover .....	.....	1
	.....	..... Handle Case .....	.....	1
	.....	..... Bushing .....	.....	1
	.....	..... Screw Nut.....	.....	2
20.....	JLP150A-20 .....	Friction Disc (1.5T, 3T, 6T).....	.....	2
21.....	JLP150A-21 .....	Ratchet Disc (1.5T, 3T, 6T).....	.....	1
22.....	JLP75A-22 .....	Twisting Spring (0.75T, 1.5T, 3T, 6T).....	.....	1
23.....	JLP150A-23 .....	Brake Seat (1.5T, 3T, 6T) .....	.....	1
24.....	JLP300A-24 .....	Snap Ring (3T, 6T).....	Ø9 mm .....	2
25.....	JLP300A-25 .....	Pawl (3T, 6T).....	.....	2
26.....	JLP300A-26 .....	Pawl Spring (3T, 6T).....	.....	2
27.....	JLP300A-27 .....	Lever Side Plate Assembly (3T, 6T) .....	.....	1
	.....	..... Lever Side Plate .....	.....	1
	.....	..... Stay Bolt.....	.....	4
	.....	..... Pawl Pin .....	.....	2
	.....	..... Bearing Race.....	.....	1
28.....	JLP300A-28 .....	Load Sprocket (3T, 6T).....	.....	1
29.....	JLP300A-29 .....	Roller Set (Right and Left) (3T, 6T) .....	Ø5x6 mm .....	60
30.....	JLP300A-30 .....	Driving Pinion (3T, 6T) .....	.....	1
31.....	JLP300A-31 .....	Stripper (3T, 6T) .....	.....	1
32.....	JLP300A-32 .....	Chain Guide Plate (3T, 6T) .....	.....	1
34.....	JLP300A-34 .....	Gear Side Plate Assembly (3T, 6T) .....	.....	1
	.....	..... Gear Side Plate .....	.....	1
	.....	..... Bearing Race.....	.....	1
	.....	..... Bushing .....	.....	2
35.....	JLP300A-35 .....	Load Gear (3T, 6T).....	.....	1
36.....	JLP300A-36 .....	Snap Ring (3T, 6T) .....	Ø45 mm .....	1
38.....	JLP300A-38 .....	Spur Gear Assembly (3T, 6T) .....	.....	2

<b>Index No.</b>	<b>Part No.</b>	<b>Description</b>	<b>Size</b>	<b>Qty</b>
39	JLP300A-39	Gear Cover Assembly (3T, 6T)		1
		Gear Cover		1
		Bushing		2
		Gear Cover Plate		1
40	JLP300A-40	Lock Nut (3T, 6T)	M12	1
41	JLP600A-41	Top Hook Assembly		1
		Top Hook		1
		Top Hook Holder		1
		Safety Latch Kit		1
		Bolt		3
		Lock Nut		1
		Safety Latch Kit		1
		Top Hook Shaft		1
43	JLP300A-43	Top Hook Shaft (3T, 6T)		1
44	JLP300A-44	Load Chain – specify length (3T, 6T)	Ø10x30 mm	1
45	JLP75A-45	Chain Stop (0.75T, 1.5T, 3T, 6T)		1
46	JLP300A-46	Load Pin Nut (3T, 6T)	M10	1
49	JLP600A-49	Bottom Hook Assembly		1
		Bottom Hook		1
		Bottom Hook Holder		1
		Safety Latch Kit		1
		Bolt A	M10x45	2
		Bolt B	M8x45	2
		Idle Shaft		1
		Idle Sheave		1
		Lock Nut A	M10	2
		Lock Nut B	M8	2
51	JLP600A-51	Top Hook Load Pin		1
52	JLP600A-52	Bolt	M8x50	3
54	JLP600A-54	Lock Nut	M8	3
55	JLP600A-55	Bolt A	M10x45	2
56	JLP600A-56	Bolt B	M8x45	2
57	JLP600A-57	Idle Shaft		1
58	JLP600A-58	Idle Sheave		1
60	JLP600A-60	Lock Nut A	M10	2
62	JLP600A-62	Lock Nut B	M8	2
63	JLP600A-63	Safety Latch Kit		2
		Safety Latch		2
		Double Spring		2
		Socket Cap Screw	M5x30	2
		Lock Nut	M5	2
64	JLP75A-64	Name Plate Rivet (0.75T, 1.5T, 3T, 6T)	Ø3x6 mm	4
65	JLP600A-65	Name Plate		1
66	JLP150A-66	Stop Knob (1.5T, 3T, 6T)		1

Note: All parts mentioned as assembly are sold as an assembly only.

When ordering replacement chain (#44), specify length.