

# Parts



## Ordering Replacement Parts

To order parts or reach our service department, call 1-800-274-6848, Monday through Friday (see our website for business hours: [www.wmhtoolgroup.com](http://www.wmhtoolgroup.com)). Having the Model Number and Serial Number of your machine available when you call will allow us to serve you quickly and accurately.

### Fence – Parts All Models

Index No.	Part No.	Description	Size	Qty.
	JEJ-FW	Fence Assembly Complete (JJ-6CSX)		1
	JJ6CSDX-FAC	Fence Assembly Complete (JJ-6CSDX)		1
1	JEJ-F01W	Fence Body (JJ-6CSX)		1
1A	JJ6CSDX-201	Fence Body (JJ-6CSDX)		1
2	JEJ-F14	Fence Link		2
3	JEJ-F02W	Tilt Plate (JJ-6CSX)		1
	JJ6CSDX-203	Tilt Plate (JJ-6CSDX)		1
4	JED-F16	Threaded Stud		4
5	TS-0561031	Hex Nut	3/8"-16	4
6	JEB-F09	Handle		1
7	5DF-I09	Knob		1
8	5CH-F13A	Flat Head Socket Screw (JJ-6CSX)	5/16"x1-5/8"	2
8A	TS-0207041	Socket Head Cap Screw (JJ-6CSDX)	1/4"-20x3/4"	2
9	JED-F02	Block (JJ-6CSX)		1
9A	PJ882-142	Fixed Block (JJ-6CSDX)		1
10	JEJ-F03	Block		1
11	JEJ-F04	Bolt		1
12	TS-0561041	Hex Nut	7/16"-14	1
13	JEJ-F05	Stud		1
14	JEJ-F06	Swivel Block		1
15	JEJ-F07	Plate		1
16	5FF-J12	Spring Pin	Ø4x12	1
17	JEJ-F08	Hex Cap Bolt		1
18	JEJ-F09	Plate		1
19	TS-0561072	Hex Nut	5/8"-18UNF	2
20	JEJ-F10	Bushing		1
21	JEJ-F11W	Fence Bracket (JJ-6CSX)		1
	JJ6CSDX-221	Fence Bracket (JJ-6CSDX)		1
22	TS-0680061	Flat Washer	1/2"	3
23	JEJ-F12	Lock Handle		2
24	JED-F17	Lock Nut		1
25	TS-0051051	Hex Cap Screw	5/16"-18x1"	1
26	TS-0561021	Hex Nut	5/16"-18	2
27	TS-0051081	Hex Cap Screw	5/16"-18x1-3/4"	1
28	JED-F03	Plate		1
29	TS-0813032	Screw	1/4"-20x1/2"	2
30	TS-0680021	Flat Washer (JJ-6CSX)	1/4"	2
	TS-0680021	Flat Washer (JJ-6CSDX)	1/4"	4
31	TS-0561052	Hex Nut	1/2"-20UNF	2
32	PJ882-144	Pad Block (JJ-6CSDX)		1
33	TS-069204	Flat Washer (JJ-6CSDX)	#10	2
34	TS-0206021	Socket Head Cap Screw (JJ-6CSDX)	#10-24x1/2"	2

## Fence – Assembly All Models

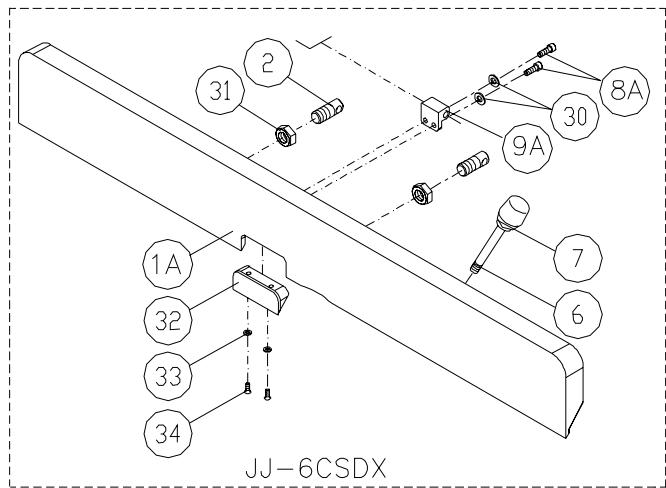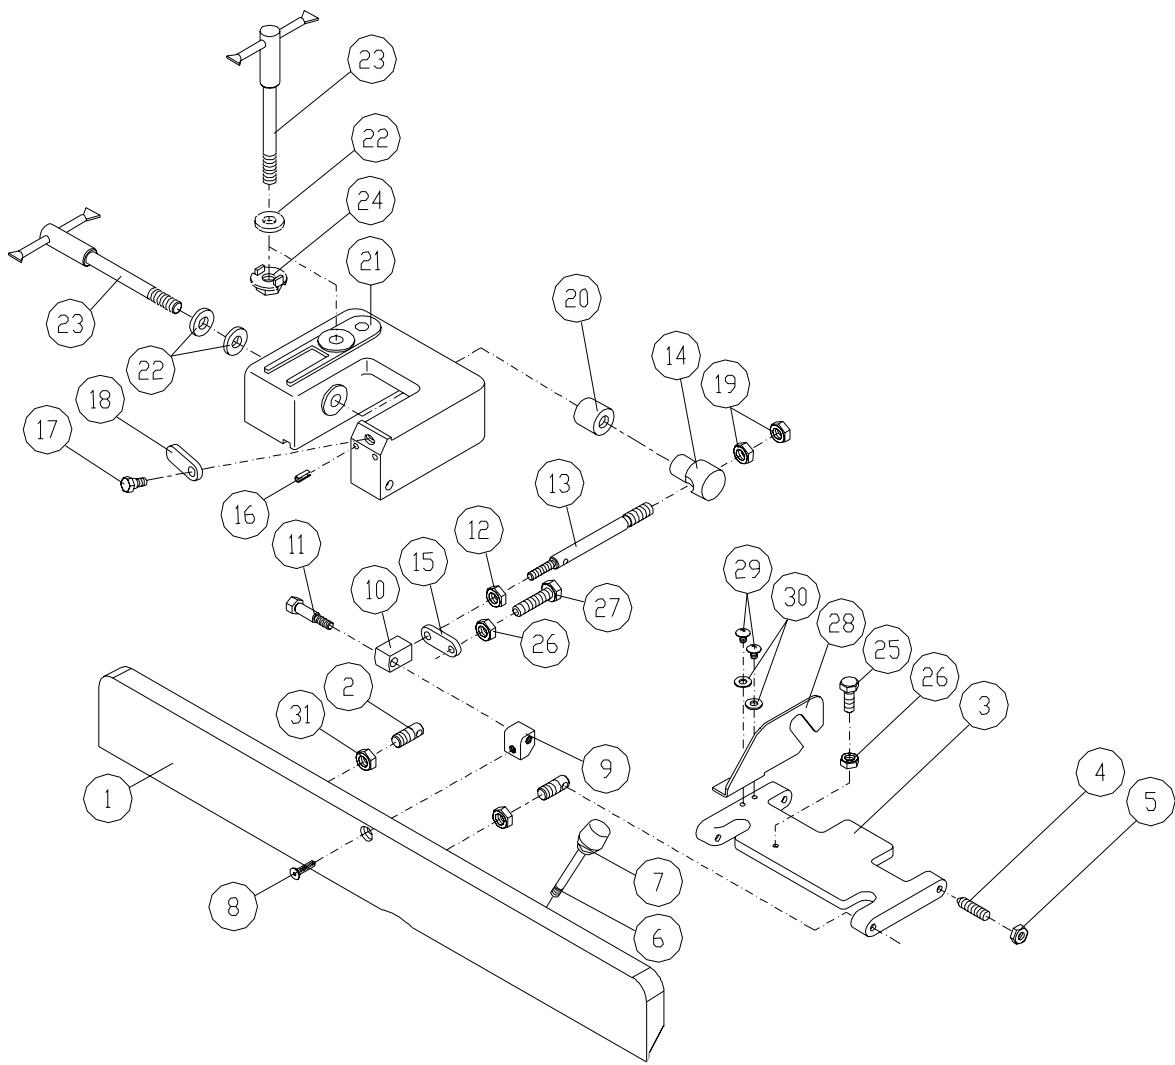

## Stand – Parts, JJ-6CSX and JJ-6CSDX


Index No.	Part No.	Description	Size	Qty.
1.....	JI-Y01W.....	Stand Body.....		1
2.....	JI-Y01AW .....	Access Cover .....		1
7.....	TS-0267041 .....	Set Screw.....	1/4"-20x3/8"	2
8.....	JH-M10 .....	Motor Pulley (JJ-6CSX) .....		1
	6296125.....	Motor Pulley (JJ-6CSDX).....		1
9.....	VB-A36 .....	V-Belt (JJ-6CSX) .....	A-36	1
	VB-A37 .....	V-Belt (JJ-6CSDX).....	A-37	1
10.....	JC-M07 .....	Lock Bolt* .....	3/8"-16	3
11.....	TS-0720091 .....	Lock Washer* .....	3/8"	3
12.....	TS-0680031 .....	Flat Washer .....	5/16"	4
13.....	TS-0051031 .....	Hex Head Bolt .....	5/16"-18x3/4"	4
14.....	TS-0561021 .....	Hex Nut .....	5/16"-18	4
15.....	TS-081B042.....	Screw .....	#8-32x5/8"	2
16.....	5EA-D05 .....	Star Washer .....	#8	2
17.....	TS-0560061 .....	Hex Nut .....	#8-32	2
18.....	TS-1550021 .....	Flat Washer .....	M4	2
19.....	JEX-S02 .....	Dust Chute .....		1
21.....	TS-0680021 .....	Flat Washer* .....	1/4"	4
22.....	TS-081F032.....	Screw* .....	1/4"-20x1/2"	4
23.....	994542 .....	Switch .....		1
24.....	JI-X02 .....	Power Cord .....		1
25.....	5QA-I04 .....	Strain Relief Bushing .....		3
26.....	JI-X04W .....	Motor .....	1HP	1
	JI-X04-AA .....	Centrifugal Switch (not shown) .....		1
	JI-X04-B.....	Capacitor (motor – not shown) .....	300MFD 125VAC	1
	JI-X04-CA .....	Capacitor Cover .....		1
	JI-X04-DA .....	Junction Box (motor – not shown) .....		1
	JI-X04-EA .....	Junction Box Cover (motor – not shown) .....		1
	JI-X02-A.....	Motor Cord (not shown) .....		1
	JJ6CS-HK .....	Hardware Kit (not shown) .....		1
	TS-152704 .....	Hex Key Wrench (3mm – not shown)* .....		1
	JJ6CS-OEW .....	Open End Wrench (8/10mm – not shown)* .....		1
	JJ6CS-OEW2 .....	Open End Wrench (12/14mm – not shown)* .....		1
	TS-227D081 .....	Hex Wrench (8mm – not shown)** .....		1
	JJ6CSDX-326A.....	T-Hex Wrench (4mm – not shown)** .....		1
27.....	JJ6-03CS .....	Key .....	5x5x30	1
28.....	5AL-C10B .....	Tapping Screw .....	M4x25	2
30.....	TS-0680031 .....	Flat Washer .....	5/16"	4
31.....	PG-M02 .....	JET Logo Label .....		1
32.....	JJ6CSX-332.....	Warning Label .....		1
33.....	JEB-S07 .....	Warning Label .....		1
34.....	JEB-S08 .....	Voltage Label .....		1
35.....	JEB-S09 .....	Switch Box .....		1
36.....	TS-0720081 .....	Lock Washer .....	5/16"	4
37.....	TS-1550021 .....	Flat Washer* .....	M4	4
38.....	TS-0803032 .....	Screw* .....	#5-40x3/8"	4
39.....	TS-081F032.....	Screw* .....	1/4"-20x1/2"	4
40.....	TS-0680021 .....	Flat Washer* .....	1/4"	4
41.....	JEY-S03W .....	Belt Guard .....		1
42.....	JEY-S07 .....	Plate .....		1
43.....	TS-081C032 .....	Screw .....	#10-24x1/2"	2
44.....	TS-069204 .....	Flat Washer .....	#10	2

\* included in Hardware Kit for JJ-6CSX

\*\* included in Hardware Kit for JJ-6CSDX

## Stand – Parts and Assembly, JJ-6CSX and JJ-6CSDX

45.....TS-0561031.....Hex Nut.....	3/8"-16.....	1
46.....JC-M05.....Door Latch.....		1
47.....JC-M04.....Knob Screw.....		1

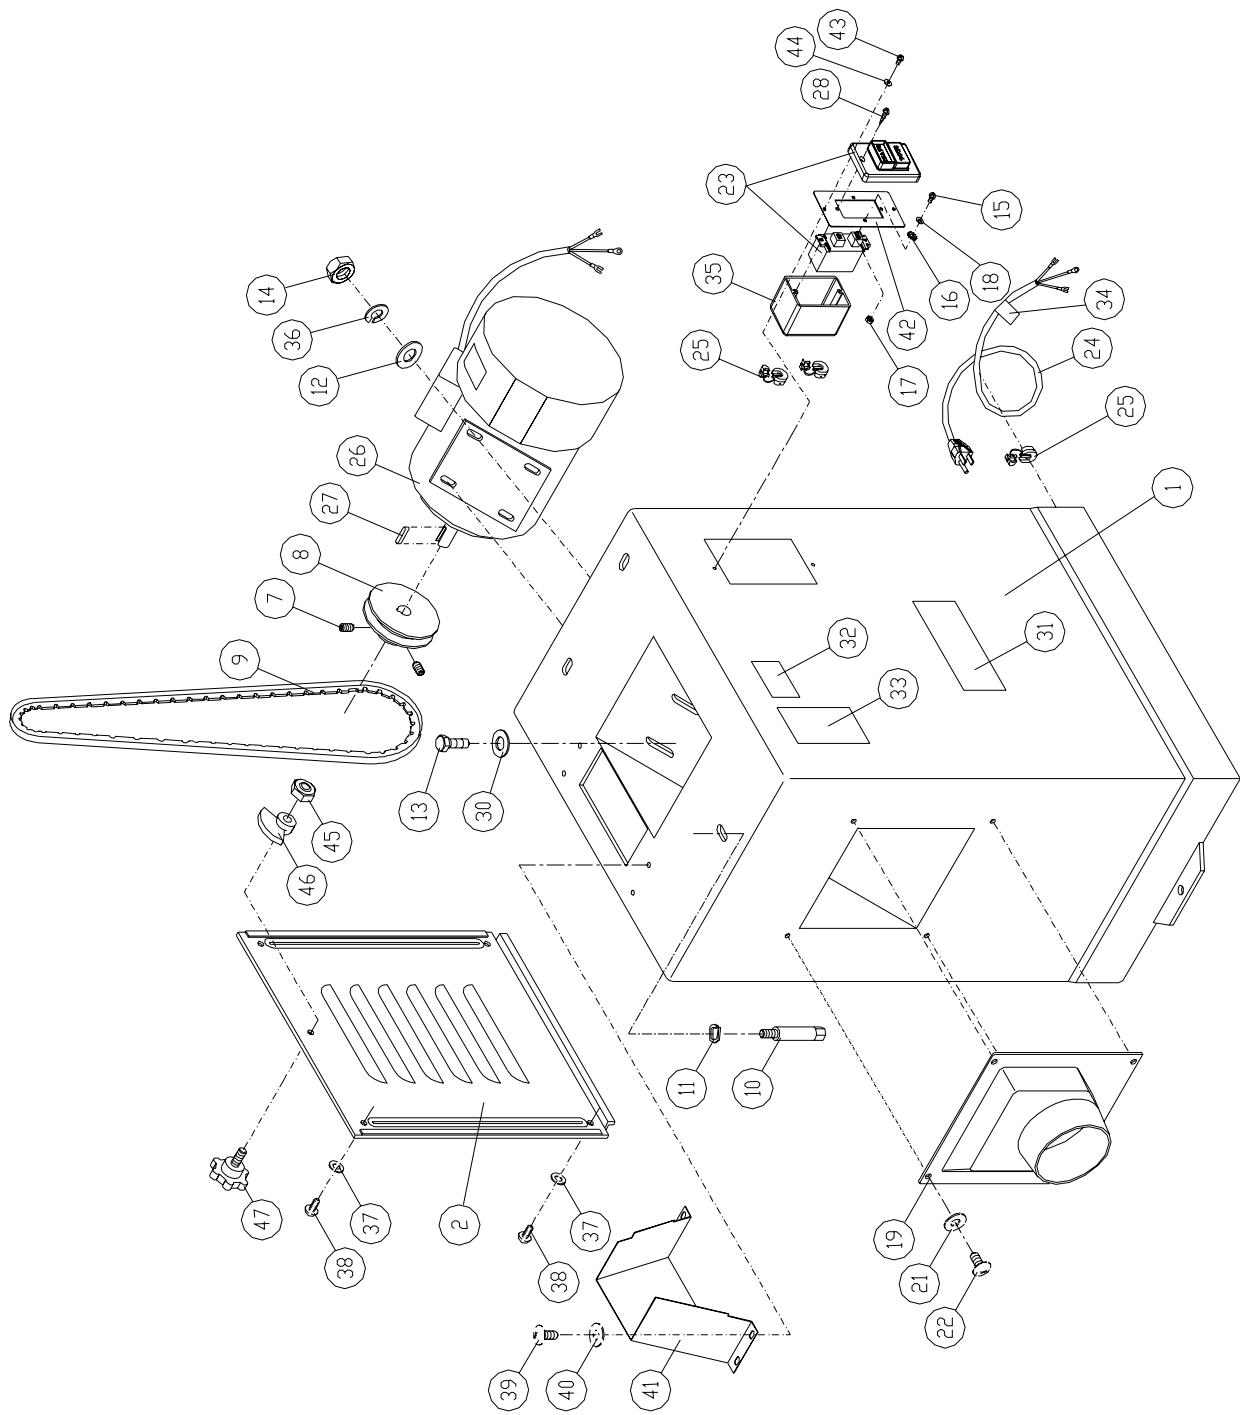


## Stand – Parts, JJ-6HHDX only

Index No.	Part No.	Description	Size	Qty.
1.....	JJ6HH-301.....	Stand Body.....		1
2.....	JI-Y01AW .....	Access Cover .....		1
7.....	TS-0267041 .....	Set Screw.....	1/4"-20x3/8"	2
8.....	6296125.....	Motor Pulley .....		1
9.....	VB-A37 .....	V-Belt .....	A-37 .....	1
10.....	JC-M07 .....	Lock Bolt* .....	3/8"-16 .....	3
11.....	TS-0720091 .....	Lock Washer* .....	3/8" .....	3
12.....	TS-0680031 .....	Flat Washer.....	5/16" .....	10
13.....	TS-0081031 .....	Hex Cap Screw .....	5/16"-18x3/4" .....	4
14.....	TS-0561021 .....	Hex Nut .....	5/16"-18 .....	4
15.....	JJ6HH-315.....	Switch Arm .....		1
16.....	JJ6HH-316.....	Cord Protector .....		2
17.....	TS-0208141 .....	Socket Head Cap Screw* .....	5/16"-18x3" .....	2
18.....	TS-0680031 .....	Flat Washer* .....	5/16" .....	2
19.....	JEX-S02 .....	Dust Chute .....		1
21.....	TS-0680021 .....	Flat Washer* .....	1/4" .....	4
22.....	TS-081F032 .....	Screw* .....	1/4"-20x1/2" .....	4
26.....	JI-X04W .....	Motor .....	1HP .....	1
.....	JI-X04-AA .....	Centrifugal Switch (not shown) .....		1
.....	JI-X04-B .....	Capacitor (motor – not shown) .....	300MFD 125VAC .....	1
.....	JI-X04-CA .....	Capacitor Cover .....		1
.....	JI-X04-DA .....	Junction Box (motor – not shown) .....		1
.....	JI-X04-EA .....	Junction Box Cover (motor – not shown) .....		1
.....	JI-X02-A .....	Motor Cord (not shown) .....		1
.....	TS-152704 .....	Hex Key Wrench (3mm – not shown)* .....		1
.....	TS-152707 .....	Hex Key Wrench (6mm – not shown)* .....		1
.....	JJ6CS-OEW .....	Open End Wrench (8/10mm – not shown)* .....		1
.....	JJ6CS-OEW2 .....	Open End Wrench (12/14mm – not shown)* .....		1
27.....	JJ6-03CS.....	Key .....	5x5x30 .....	1
31.....	PG-M02 .....	JET Logo Label .....		1
32.....	JJ6CSX-332.....	Warning Label .....		1
33.....	JEB-S07 .....	Warning Label .....		1
34.....	JEB-S08 .....	Voltage Label .....		1
36.....	TS-0720081 .....	Lock Washer .....	5/16" .....	4
37.....	TS-1550021 .....	Flat Washer* .....	M4 .....	4
38.....	TS-0803032 .....	Screw* .....	#5-40x3/8" .....	4
39.....	TS-081F032 .....	Screw* .....	1/4"-20x1/2" .....	4
40.....	TS-0680021 .....	Flat Washer* .....	1/4" .....	4
41.....	JEY-S03W .....	Belt Guard .....		1
45.....	TS-0561031 .....	Hex Nut .....	3/8"-16 .....	1
46.....	JC-M05 .....	Door Latch .....		1
47.....	JC-M04 .....	Knob Screw .....		1
48.....	JJ6HH-348.....	Screw .....	M4x25 .....	2
49.....	JPS10TS-342 .....	Stop Switch Face Plate .....		1
50.....	TS-2171012 .....	Screw .....	M4x6 .....	2
51.....	JJ6HH-351.....	Star Washer .....	M4 .....	2
52.....	JJ6HH-352.....	Switch Plate .....		1
53.....	JPS10TS-343 .....	Main Switch .....		1
54.....	JPS10TS-347 .....	Switch Box .....		1
55.....	JJ6HH-355.....	Strain Relief .....		2
56.....	TS-0208021 .....	Socket Head Cap Screw .....	5/16"-18x1/2" .....	2
57.....	JJ6HH-357.....	Motor Cord .....		1
58.....	JJ6HH-358.....	Power Cord .....		1
59.....	JJ6HH-113.....	Star Point Screwdriver (not shown)* .....		2
.....	JJ6HH-HK .....	Hardware Kit (contains items marked with *) .....		1

\* included in JJ6HH-HK, Hardware Kit


**Stand – Assembly, JJ-6HHDX only**

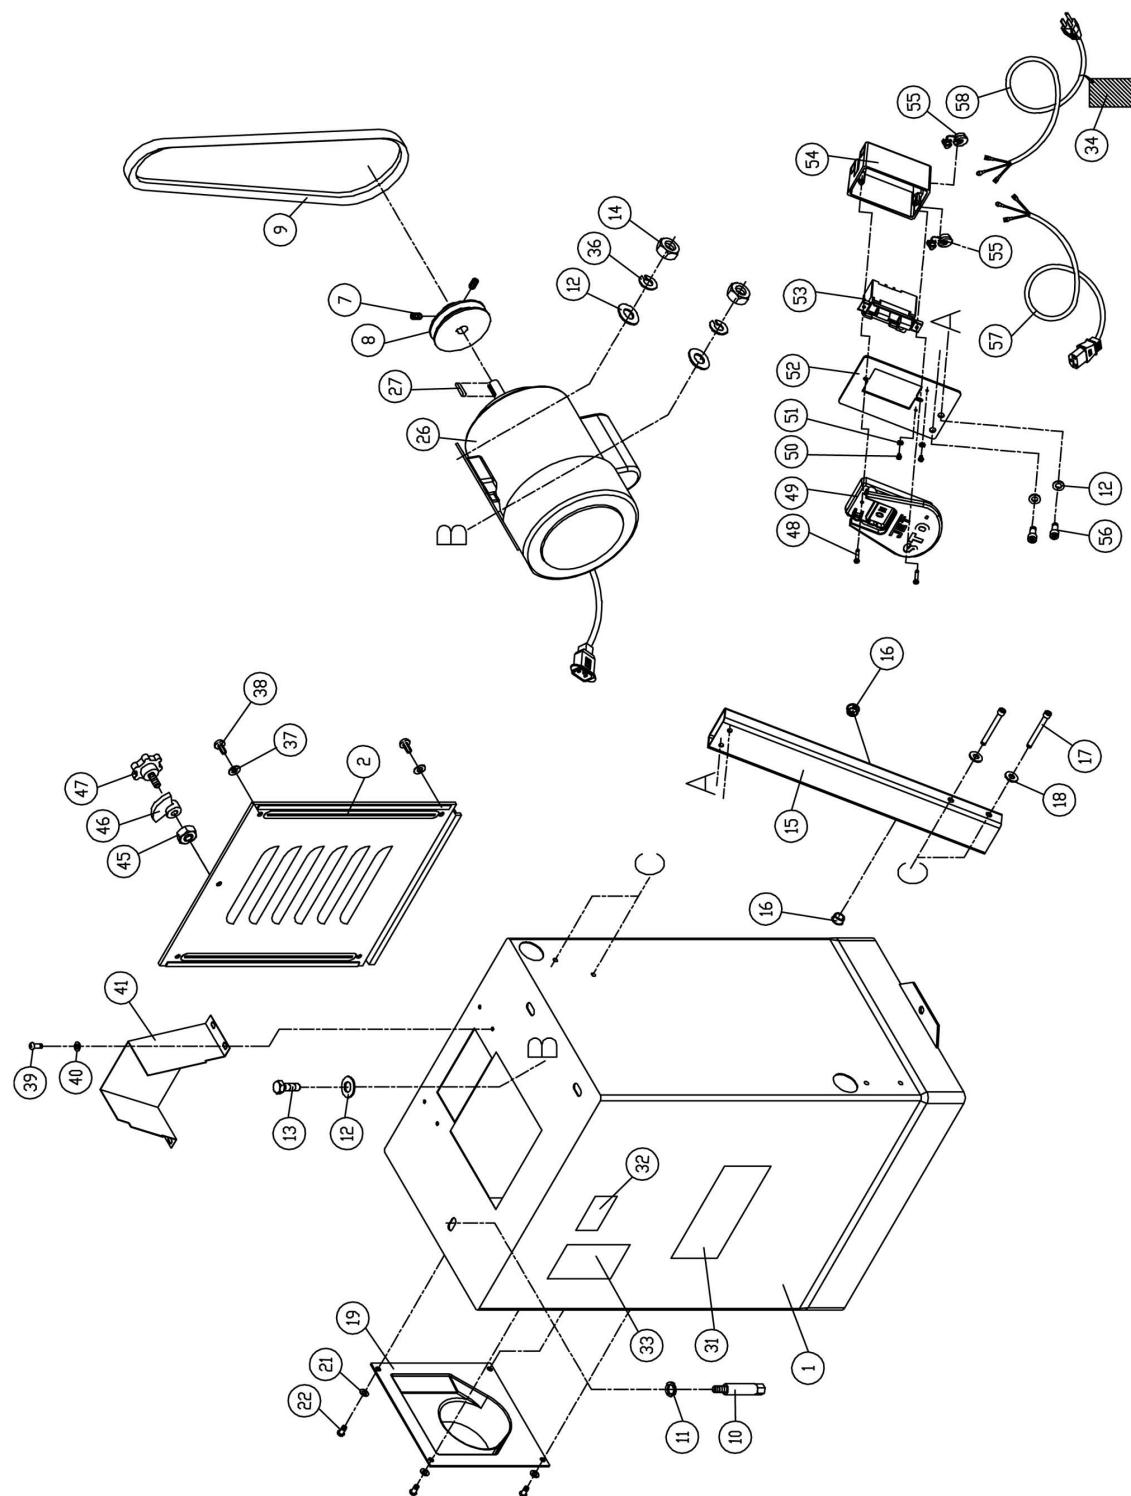

## Bed – Parts All Models


Index No.	Part No.	Description	Size	Qty.
1.....	JI-T01W .....	Base.....		1
2.....	JI-T02W .....	Front Table (JJ-6CSX).....		1
	JJ6CSDX-402 .....	Front Table (JJ-6CSDX).....		1
3.....	JI-T03W .....	Rear Table (JJ-6CSX).....		1
	JJ6CSDX-403 .....	Rear Table (JJ-6CSDX).....		1
4.....	JI-T04 .....	Gib .....		2
5.....	JH-T30.....	Lock Screw.....		2
6.....	TS-0267091 .....	Set Screw.....	1/4"-20x1"	5
7.....	TS-0561011 .....	Hex Nut.....	1/4"-20	5
8.....	JI-T07W .....	Ball Crank.....		1
9.....	JI-T06 .....	Shoulder Pin.....		2
10.....	TS-0680061 .....	Flat Washer.....	1/2"	2
11.....	PJ882-118 .....	Hex Nut.....	1/2"-12	2
12.....	JH-T11.....	Pivot Pin.....		2
13.....	JJ6CSX-413 .....	Handwheel Assembly.....		2
16.....	TS-0267041 .....	Set Screw.....	1/4"-20x3/8"	2
17.....	JH-T16.....	Bushing.....		2
18.....	JH-T17.....	Washer.....		4
19.....	JH-T18.....	Adjusting Nut.....		2
20.....	JH-T19.....	Adjusting Screw.....		2
21.....	5F-E108 .....	Pin.....	Ø3x24	2
22.....	JH-T20.....	Lock Knob.....		2
23.....	JH-T21.....	Lock Knob.....		2
24.....	TS-0270031 .....	Set Screw.....	5/16"-18x3/8"	2
25.....	JH-T12W .....	Ball Crank.....		1
26.....	JH-T22.....	Cutterhead Guard.....		1
27.....	JH-T23.....	Guard Post.....		1
28.....	JH-T24.....	Retaining Washer.....		1
29.....	JH-T25.....	Spring.....		1
30.....	JH-T26.....	Spring Knob .....		1
31.....	JH-T27.....	Retainer.....		1
32.....	TS-081B042 .....	Screw.....	#8-32x5/8"	3
33.....	JC-T17 .....	Pointer.....		1
34.....	TS-081B012 .....	Screw.....	#8-32x1/4"	1
35.....	JJ6-19.....	Depth Scale.....		1
36.....	JJ6-01CS .....	Warning Label.....		1
37.....	JJ6-02CS .....	I.D Label (JJ-6CSX).....		1
	JJ6CSDX-437 .....	I.D Label (JJ-6CSDX).....		1
	JJ6HH-437 .....	I.D Label (JJ-6HHDX).....		1
38.....	JEJ-B14W .....	Fence Base (JJ-6CSX).....		1
38A.....	JJ6CSDX-438 .....	Fence Base (JJ-6CSDX).....		1
39.....	JED-B02 .....	Key.....		1
40.....	5FF-J12 .....	Spring Pin.....	Ø4x20	1
41.....	TS-0680041 .....	Flat Washer.....	3/8"	1
42.....	TS-0680041 .....	Flat Washer.....	3/8"	1
43.....	TS-0209071 .....	Socket Head Cap Screw.....	3/8"-16x1-1/2"	2
44.....	JEY-B01 .....	1/8" Set Block.....		1
45.....	JEA-B06 .....	Stud .....		1
46.....	JEA-B08 .....	Spring.....		1
47.....	JEA-B09 .....	Stud .....		1
48.....	5DF-B05 .....	Knob .....		1
49.....	5CO-D09B .....	Lock Handle .....	1/4"-20x7/8"	1
50.....	TS-0208041 .....	Hex Socket Cap Screw.....	5/16"-18x3/4"	3
51.....	708815 .....	Push Block .....		2
52.....	TS-1533032 .....	Screw .....	M5x0.8Px10	1
53.....	TS-1550021 .....	Flat Washer.....	M4	1

54.....	5F-H051.....	Rivet.....	6
55.....	TS-0207021 .....	Socket Head Cap Screw (JJ-6CSDX) .....	1

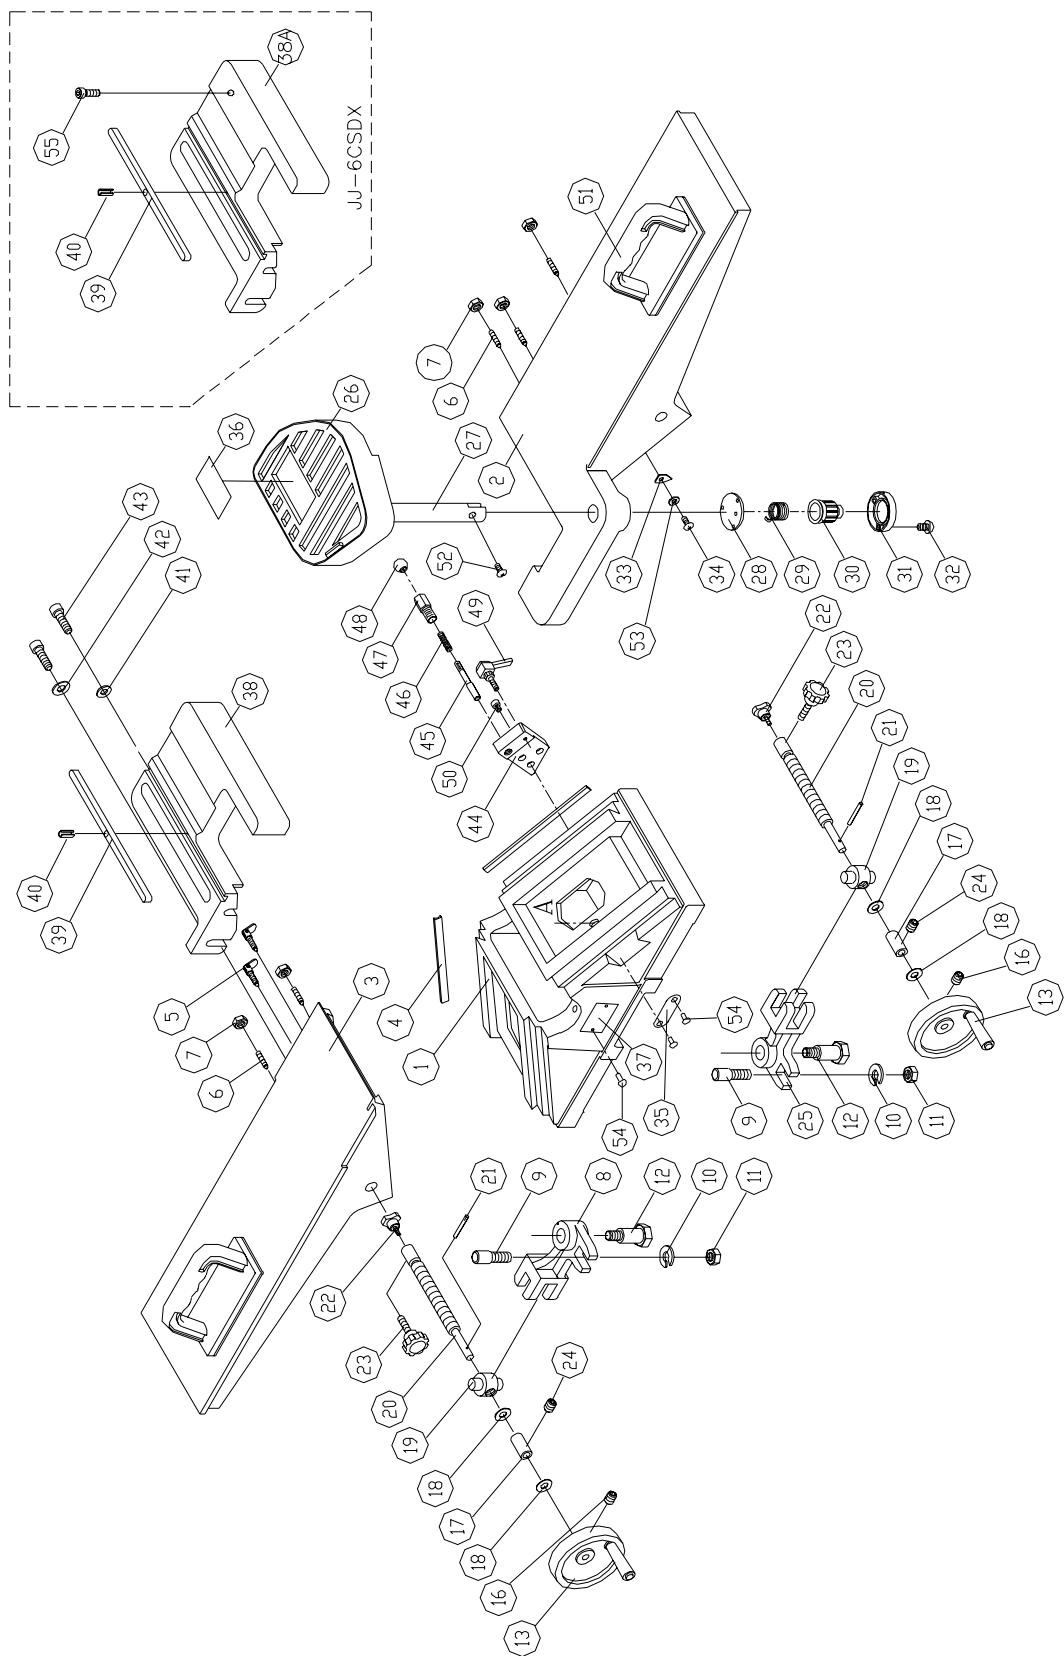


## Cutterhead – Parts and Assembly JJ-6HHDX

Index No.	Part No.	Description	Size	Qty.
	JJ6HH-CA	Cutterhead Assembly (Index # 1 thru 12)		1
1	TS-0267041	Socket Set Screw	1/4"-20x3/8	2
2	JH-C07	Cutterhead Pulley		1
3	JH-C04	Bearing Housing		1
4	BB-6203VV	Ball Bearing	6203VV	1
5	5F-G108	Key	5x5x25	1
	1791221-4	Helical Cutterhead Unit (Index # 6 thru 8)		1
6	1791212	Knife Insert (set of 10)		total 27
7	JWP208HH-111	Knife Insert Screw	#10-32x1/2	27
8	JJ6HH-108	Helical Cutterhead		1
9	BB-6202VV	Ball Bearing	6202VV	1
10	3H-C02	Bearing Housing		1
11	TS-0720091	Lock Washer	3/8"	2
12	JEA-B01	Bolt	3/8"-24x3-1/2"	2

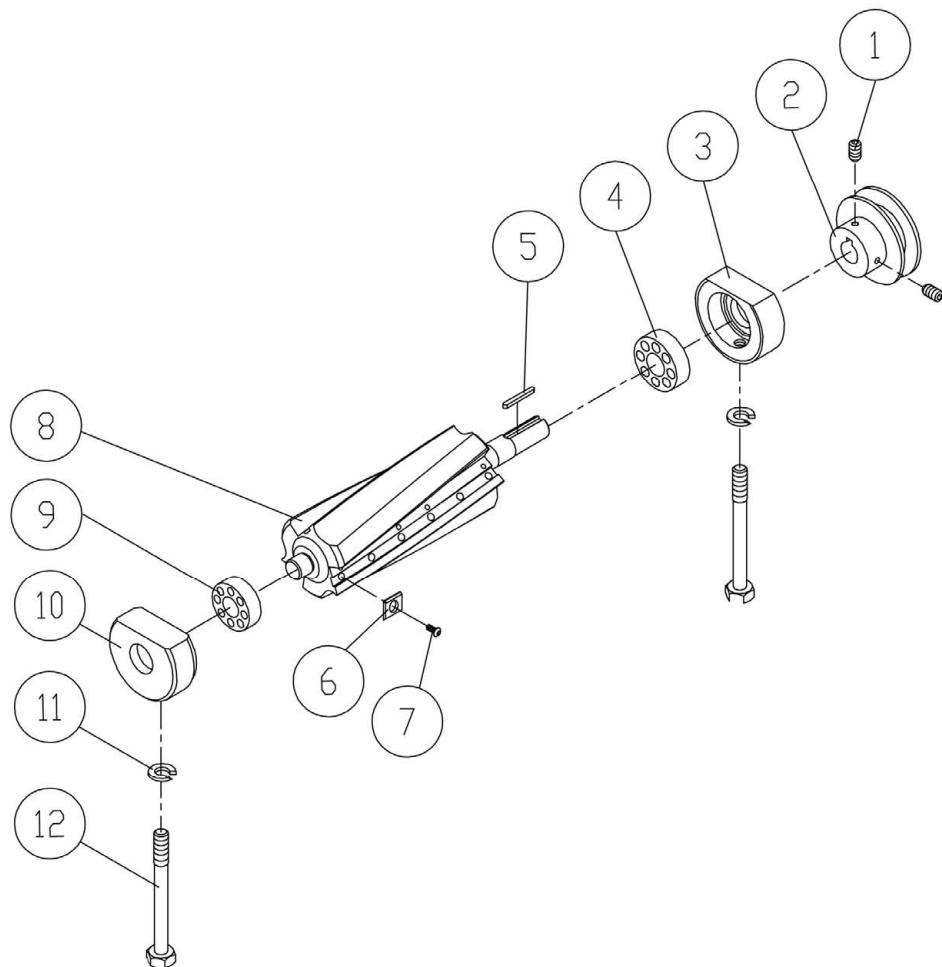

## Wiring Diagram – All Models

### ELECTRICAL SCHEMATIC - 115V

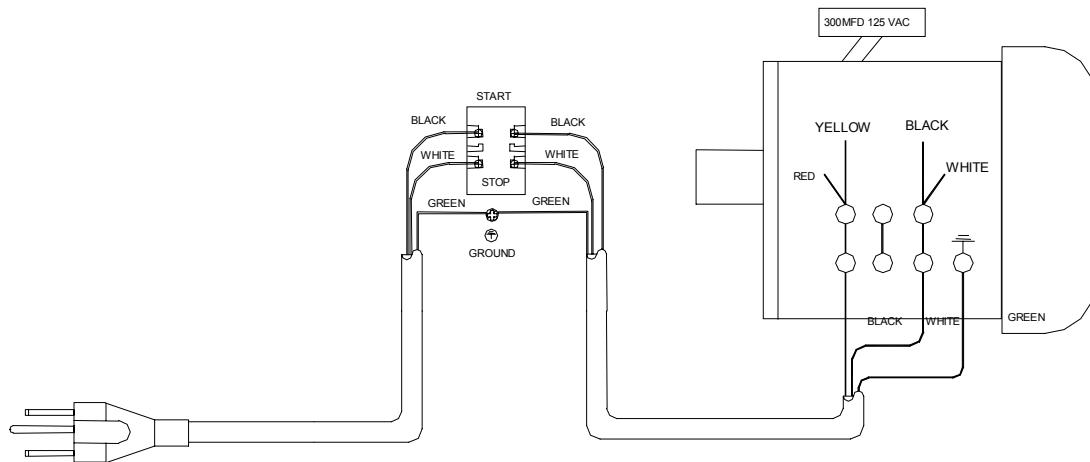

### ELECTRICAL SCHEMATIC - 230V

