


Breakdown for the SR-1650N Slip Roll

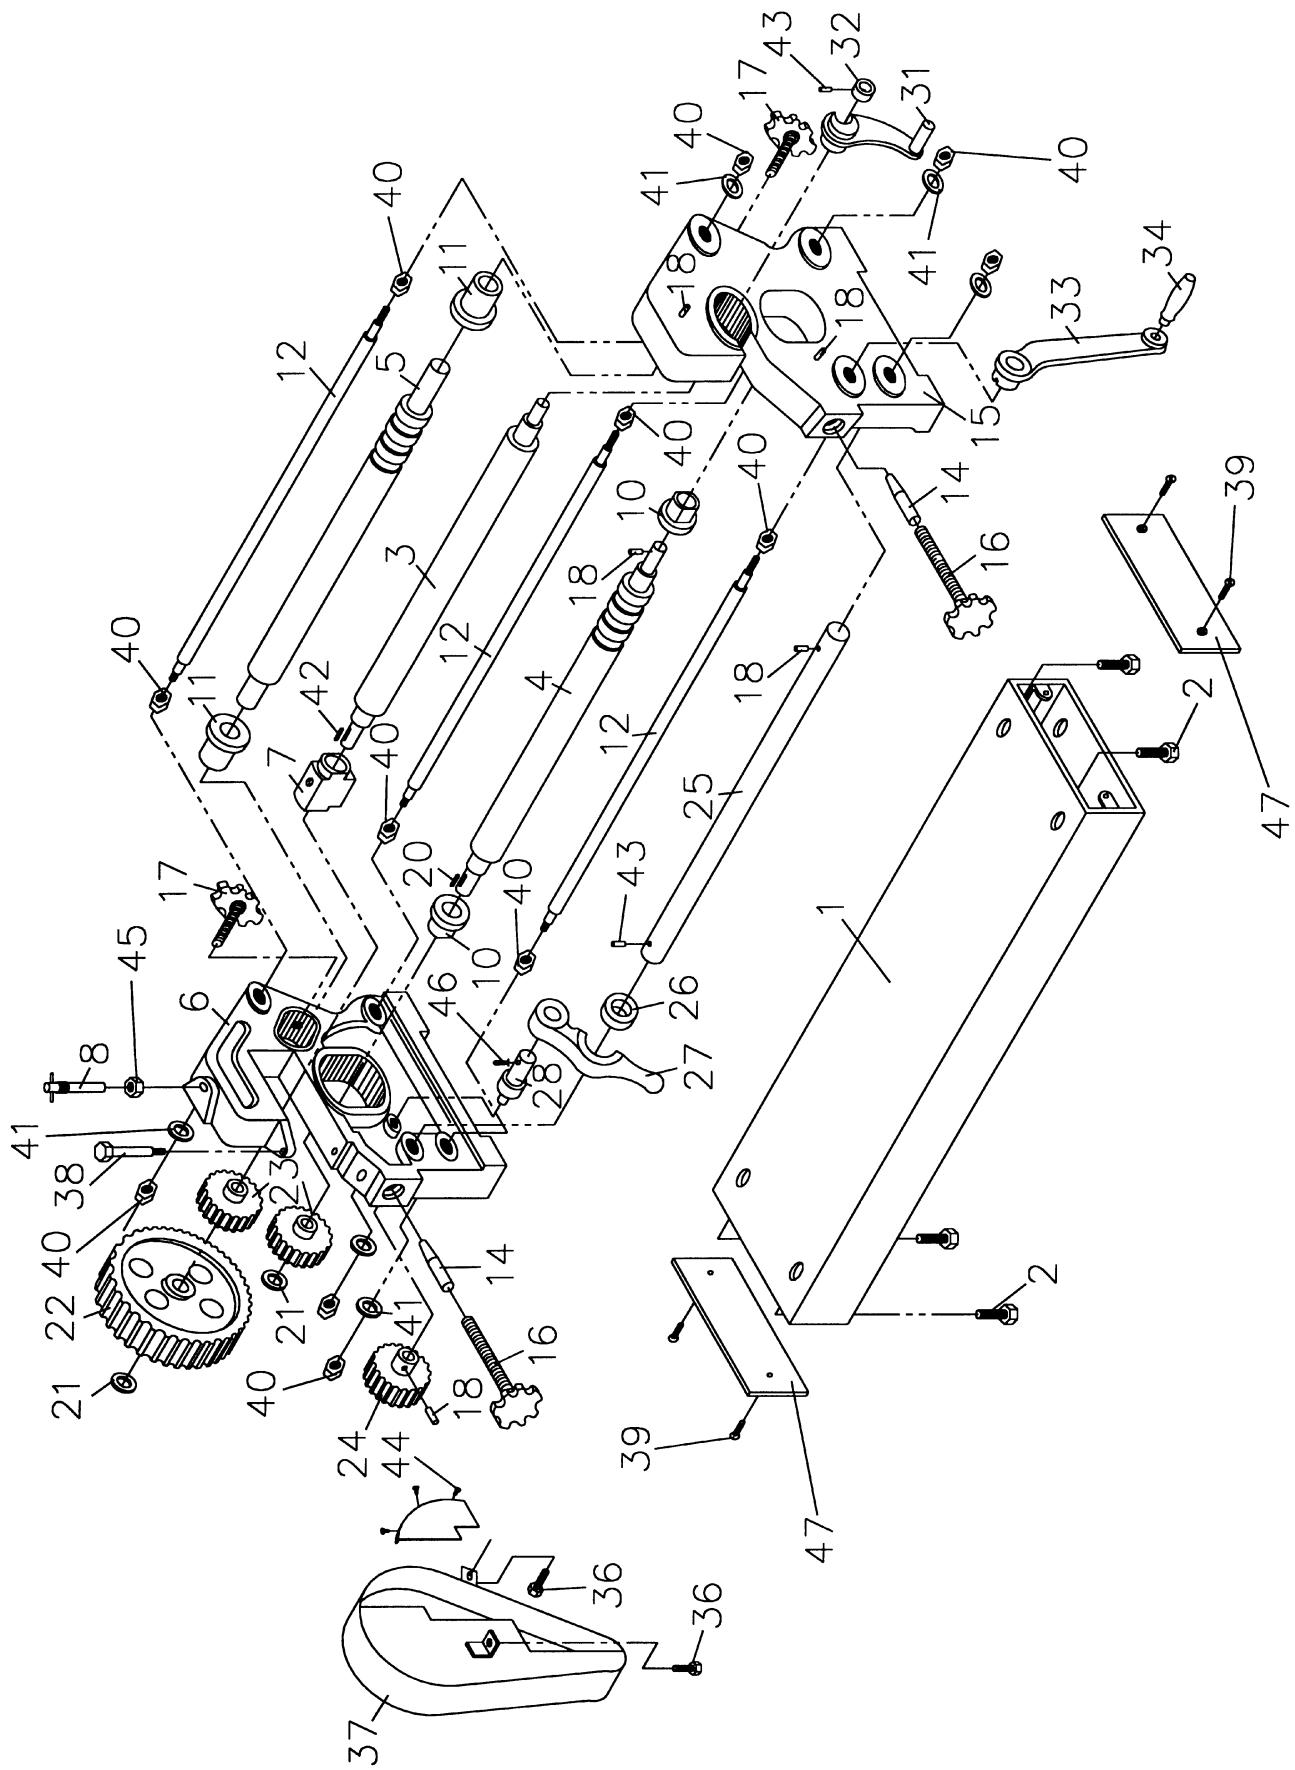

Parts List for the SR-1650N Slip Roll

Index No.	Part No.	Description	Size	Quantity
1.....	SR1650N-1	Base Assembly.....		1
2.....	SR1650N-2	Hex Cap Screw.....	M16x25.....	4
3.....	SR1650N-3	Upper Roll		1
4.....	SR1650N-4	Lower Roll		1
5.....	SR1650N-5	Rear Roll		1
6.....	SR1650N-6	Left Support.....		1
7.....	SR1650N-7	Left Upper Roll Seat.....		1
8.....	SR1650N-8	Set Rod Assembly		1
10.....	SR1650N-10	Bushing		2
11.....	SR1650N-11	Bushing		2
12.....	SR1650N-12	Set Rod		3
14.....	SR1650N-14	Pin		2
15.....	SR1650N-15	Right Support.....		1
16.....	SR1650N-16	Knob.....		2
17.....	SR1650N-17	Knob.....		2
18.....	SR1650N-18	Spring Pin.....	5x40.....	5
20.....	SR1650N-20	Key	8x8x30	2
21.....	SR1650N-21	C-Ring	28	2
22.....	SR1650N-22	Gear		1
23.....	SR1650N-23	Gear		2
24.....	SR1650N-24	Gear		1
25.....	SR1650N-25	Rod		1
26.....	SR1650N-26	Bushing		1
27.....	SR1650N-27	Stop		1
28.....	SR1650N-28	Shaft Assembly.....		1
31.....	SR1650N-31	Clamp Handle.....		1
32.....	SR1650N-32	Bushing		1
33.....	SR1650N-33	Arm		1
34.....	SR1650N-34	Handle		1
36.....	SR1650N-36	Hex Cap Screw.....	M8x20	2
37.....	SR1650N-37	Gear Cover Assembly		1
38.....	SR1650N-38	Hex Socket Bolt	M4x5	1
39.....	SR1650N-39	Flat Head Screw	M4x5	4
40.....	SR1650N-40	Hex Nut	M16	12
41.....	SR1650N-41	Washer	M16	6
42.....	SR1650N-42	Key	8x8x60	1
43.....	SR1650N-43	Set Screw	M8x10	1
44.....	SR1650N-44	Tapping Screw	ST4.3x9	8
45.....	SR1650N-45	Hex Nut	M20	1
46.....	SR1650N-46	Cotter Pin	3.2x30	1
47.....	SR1650N-47	Plate		2
.....	SR1650N-ID.....	ID Label (not shown).....		1
.....	SR1650N-W.....	Warning Label (not shown)		1
.....	SR1650N-J.....	JET Label (not shown)		1