
19

16

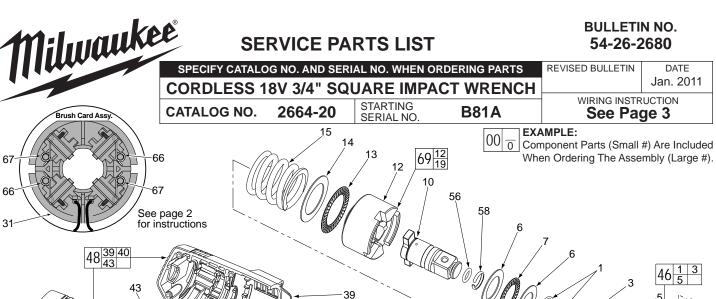

49

33

50 31 36 37 61 66 67

44 27 28 32 33 47 64

32

26

24

31 66 67

25

47

20

	10	·
	42	37
ı	*NOTE:	/\//
ı	Compression spring (38)	
ı	is positioned between the	∥ ∕ 7/ / 3 9
ı	bottom/back of the left	
ı	housing half (39) and the	37)
ı	back of the connector	
ı	block (37) as shown.	E HE CONTRACTOR
ı		
ı	38	

DESCRIPT O-Ring

Bushing

Wire Harness

(61) plugs into

bottom of Switch (36)

62

63

FIG.

1 3

PART NO.

OF		FIG. 38 39
TON OF PART N	O.REQ.	40 42
	(2)	43
- D III Oli T 00 0	(1)	44
n Pan Hd. Slt. T-20 Screw Housing	(4)	46 47
lousing	(2)	48
ring	\ 1 \	49
9	(1)	50
	(1)	56
ring	(1)	58
	(1)	61
on Spring	(1)	62

35

5	4	05-88-5988	M5 X 35mm Pan Hd. Slt. T-20 Screw	(4)
10	5		Gearcase Housing	
10	6	45-88-1875	Washer	(2)
12	7	02-80-3256	Thrust Bearing	(1)
13 02-80-0200 Thrust Bearing (1) 14 45-88-1006 Washer (1) 15 40-50-0755 Compression Spring (1) 16 45-88-1650 Washer (1) 17 02-02-7010 7/32" Ball (1) 18 02-02-0250 1/4" Ball (2) 19		42-06-0690	3/4" Anvil	(1)
14 45-88-1006 Washer (1) 15 40-50-0755 Compression Spring (1) 16 45-88-1650 Washer (1) 17 02-02-7010 7/32" Ball (1) 18 02-02-0250 1/4" Ball (2) 19	12		Hammer	
15	13	02-80-0200	Thrust Bearing	
16 45-88-1650 Washer (1) 17 02-02-7010 7/32" Ball (1) 18 02-02-0250 1/4" Ball (2) 19	14	45-88-1006	Washer	(1)
17 02-02-7010 7/32" Ball (1) 18 02-02-0250 1/4" Ball (2) 19	15	40-50-0755	Compression Spring	
18 02-02-0250 1/4" Ball (2) 19	16	45-88-1650	Washer	(1)
20 32-65-0260 Ring Gear (1) 21 32-62-0500 Planet Gear (3) 22 44-60-1960 Pin (3) 23 45-88-1655 Washer (1) 24 02-04-0375 Ball Bearing (1) 25 34-40-0290 Seal Ring (1) 26 44-66-0895 Motor Mount Plate (1) 27	17	02-02-7010	7/32" Ball	
20 32-65-0260 Ring Gear (1) 21 32-62-0500 Planet Gear (3) 22 44-60-1960 Pin (3) 23 45-88-1655 Washer (1) 24 02-04-0375 Ball Bearing (1) 25 34-40-0290 Seal Ring (1) 26 44-66-0895 Motor Mount Plate (1) 27	18	02-02-0250	1/4" Ball	(2)
21 32-62-0500 Planet Gear (3) 22 44-60-1960 Pin (3) 23 45-88-1655 Washer (1) 24 02-04-0375 Ball Bearing (1) 25 34-40-0290 Seal Ring (1) 26 44-66-0895 Motor Mount Plate (1) 27	19		Camshaft	
23 45-88-1655 Washer (1) 24 02-04-0375 Ball Bearing (1) 25 34-40-0290 Seal Ring (1) 26 44-66-0895 Motor Mount Plate (1) 27	20	32-65-0260	Ring Gear	
23 45-88-1655 Washer (1) 24 02-04-0375 Ball Bearing (1) 25 34-40-0290 Seal Ring (1) 26 44-66-0895 Motor Mount Plate (1) 27			Planet Gear	(3)
23 45-88-1655 Washer (1) 24 02-04-0375 Ball Bearing (1) 25 34-40-0290 Seal Ring (1) 26 44-66-0895 Motor Mount Plate (1) 27			Pin	(3)
25 34-40-0290 Seal Ring (1) 26 44-66-0895 Motor Mount Plate (1) 27		45-88-1655		(1)
26 44-66-0895 Motor Mount Plate (1) 27		02-04-0375	Ball Bearing	
27		34-40-0290		
28	26	44-66-0895	Motor Mount Plate	(1)
29 18-01-3025 Service Field Assembly (1) 31 22-22-1700 Brush Card (1) 32			Ball Bearing - Front	
31 22-22-1700 Brush Card (1) 32			Pinion	
32 Washer (1) 33 Ball Bearing - Rear (1) 35 45-24-0570 Forward / Reverse Shuttle (1) 36 23-66-0427 Switch (1)				
33 Ball Bearing - Rear (1) 35 45-24-0570 Forward / Reverse Shuttle (1) 36 23-66-0427 Switch (1)		22-22-1700	Brush Card	
35 45-24-0570 Forward / Řeverse Shuttle (1) 36 23-66-0427 Switch (1)				
36 23-66-0427 Switch (1)				
		45-24-0570	Forward / Reverse Shuttle	
37 Connector Block (1)		23-66-0427		(1)
	37		Connector Block	(1)


FIG.	PART NO.	DESCRIPTION OF PART	NO.REQ.
38	40-50-1090	Compression Spring	(1)
39		Handle - Left	(1)
40		Handle - Right	(1)
42	06-82-0995	M4 x 16mm Pan Hd. T-20 Screw	(9)
43	45-30-0255	Rubber Slug	(4)
44	16-01-3030	Armature Assembly	(1)
46	14-30-0965	Front Housing Assembly	(1)
47		Retaining Ring	(1)
48	31-44-0695	Handle Set	(1)
49	45-22-0380	Rubber Cap	(1)
50	22-56-1130	Switch/Connector Block Assembly	(1)
56	34-40-1210	O-Ring	(1)
58	44-90-4540	C-Ring	(1)
61		Wire Harness	(1)
62	12-20-2670	Service Nameplate Kit	(1)
63	10-20-2695	Warning Label	(1)
64		Washer	(1)
65	42-55-2665	Carrying Case, Optional	(1)
66	40-50-2170	Brush Spring - Right Handed	(2) (2)
67	40-50-2175	Brush Spring - Left Handed	(2)
69	14-46-2070	Camshaft/Hammer Service Kit	(1)
FIG	LUBRICATION		


FIG.

(Type 'Z' Grease, No. 49-08-7655): Lightly coat the I.D. of the Ring Gear (20) and the center of 20,21 the three Planet Gears (21) with grease. 19

- Place a dab of grease in ball grooves of the Cam Shaft (19).
- Lightly coat the front washer surface of Anvil (10) with grease, 10 place a dab in the Ball hole on the backside of Anvil.
- Coat outside grooves of Bushing (3) with grease.

MILWAUKEE ELECTRIC TOOL CORPORATION 13135 W. LISBON RD., BROOKFIELD, WI 53005

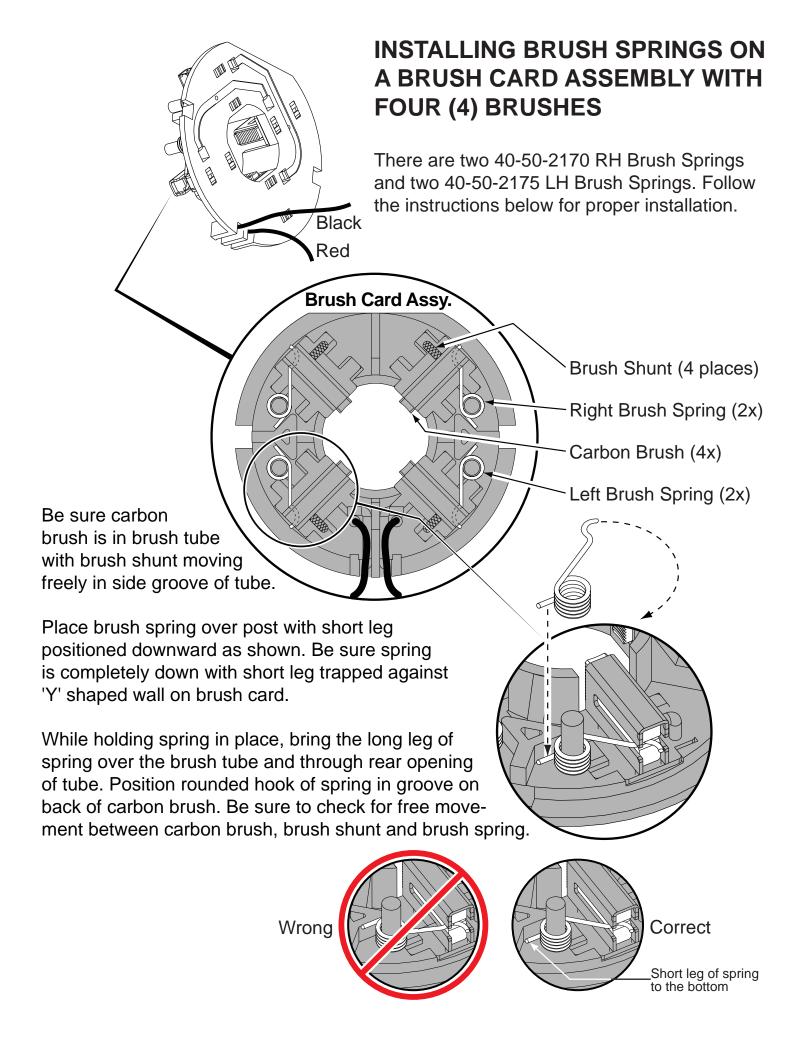

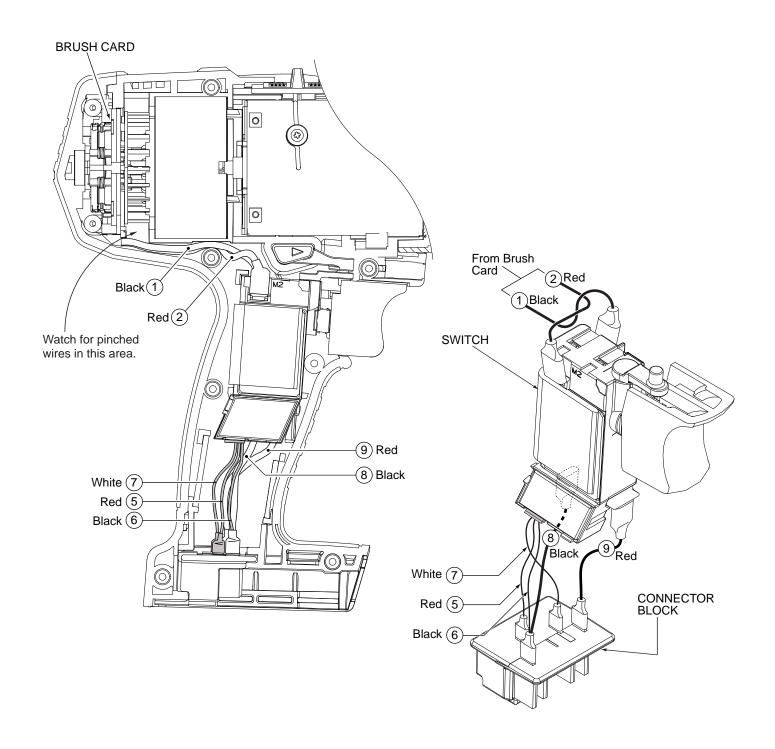

	WIRING SPECIFICATIONS			
Wire No.	Wire Color	Origin or Gauge	Length	Terminals, Connectors and 1 or 2 End Wire Preparation
1	Black			Component of the Switch/Connector Block Assembly.
2	Red			Component of the Switch/Connector Block Assembly.
5	Red			Component of the Switch/Connector Block Assembly.
6	Black			Component of the Switch/Connector Block Assembly.
7	White			Component of the Switch/Connector Block Assembly.
8	Black			Component of the Switch/Connector Block Assembly.
9	Red			Component of the Switch/Connector Block Assembly.

